


# **Conversion Factors**

Length	
	1 yard (yd) 3 feet (ft)
	1 mile (mi)
Area	
	1 acre (ac)
	1 square foot (ft²)144 square inches (in²)
Volume	
	1 ft <sup>3</sup> 7.48 gallons (gal)
	1 gallon231 cubic inches (in <sup>3</sup> )
	1 gallon 3.785 Liters (L)
	1 liter1,000 milliliters (mL)
	1 acre/foot (ac-ft)43,560 cubic feet (ft <sup>3</sup> )
	1 acre-foot (ac-ft)325,828.8 gallons (gal)
Weight and Mass	
	1 gallon of water 8.34 pounds (lbs)
	1 cubic foot of water (ft <sup>3</sup> )62.4 lbs
	1 pound (lb) 453.6 grams (g)
	1 kilogram (kg)
	1 gram 1,000 milligrams (mg)
	1% 10,000 milligrams per liter (mg/L)
	1 mg/L 0.0584 grains per gallon
	1 grain per gallon17.118 mg/L
Pressure and Head	d ·
	1 foot of head 0.433 pounds per square in (psi)
	1 pound per square inch (psi)2.31 feet of head
Temperature Conv	versions
	°C
	°F1.8(°C) + 32°
Power	, ,
	1 Horsepower
	1 Horsepower 0.746 kilowatts


## Converting lbs/gal to mg/mL

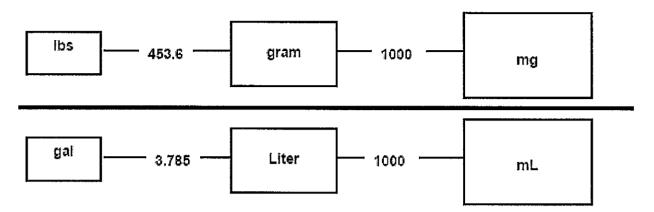

<u>To use this diagram</u>: First, find the box that coincides with the beginning units (i.e. mg/mL). Then, find the box that coincides with the desired ending units (i.e. lbs/gal). The numbers between the starting point and ending point are the conversion factors. When moving from a smaller box to a larger box, multiply by the factor between them. When moving from a larger box to a smaller box, divide by the factor between them. For final number, divide top number by bottom number.

## Metric Conversions

## Primary Unit

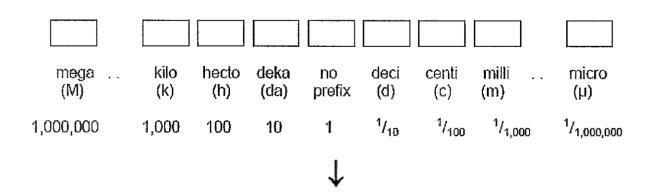

meter – linear measurement liter – volume measurement gram – weight measurement

## **Area**

Rectangle:

Area, ft<sup>2</sup> = (Length, ft)(Width, ft)

Circle:

Area,  $ft^2 = (0.785)(Diameter, ft)^2$ 

## **Volume**

Rectangle, ft<sup>3</sup>:

Volume, ft<sup>3</sup> = (Length, ft)(Width, ft)(Depth, ft)

Cylinder, ft<sup>3</sup>:

Volume, ft<sup>3</sup> = (0.785)(Diameter, ft)<sup>2</sup>(Depth or Length, ft)

Segment of Cylinder, ft<sup>3</sup>:

Volume,  $ft^3 = \left[1.333 \text{ (Height)}^2 \sqrt{\frac{\text{Diameter, ft}}{\text{Height, ft}}} - 0.608}\right] \text{ (Length, ft)}$ 

Wedge:

Volume,  $ft^3 = \frac{\text{(Length, ft)(Width, ft)(Depth, ft)}}{2}$ 

Volume, gallons

Volume, gal =  $(Volume, ft^3)(7.48ga/ft^3)$ 

## **Flow**

Q = AV OR Q = (Area)(Velocity)

Q (Channel), ft<sup>3</sup>/sec = (Width, ft)(Depth, ft)(Velocity, ft/sec)

Q (Pipeline), ft<sup>3</sup>/sec = (0.785)(Diameter, ft)<sup>2</sup>(Velocity, ft/sec)


Velocity, ft/sec = 
$$\frac{\text{Flow, ft}^3/\text{sec}}{(0.785)(\text{Diameter, ft})^2}$$

Velocity, ft/sec = 
$$\frac{\text{Distance, ft}}{\text{Time, sec}}$$

Average Daily Flow, 
$$MGD = \frac{Sum \text{ of All Daily Flows, MGD}}{Number \text{ of Daily Flows}}$$

Annual Average Daily Flow,  $MGD = \frac{Sum \text{ of All Monthly Average Daily Flows, MGD}}{Number \text{ of Monthly Average Daily Flows}}$ 

## Flow Conversions

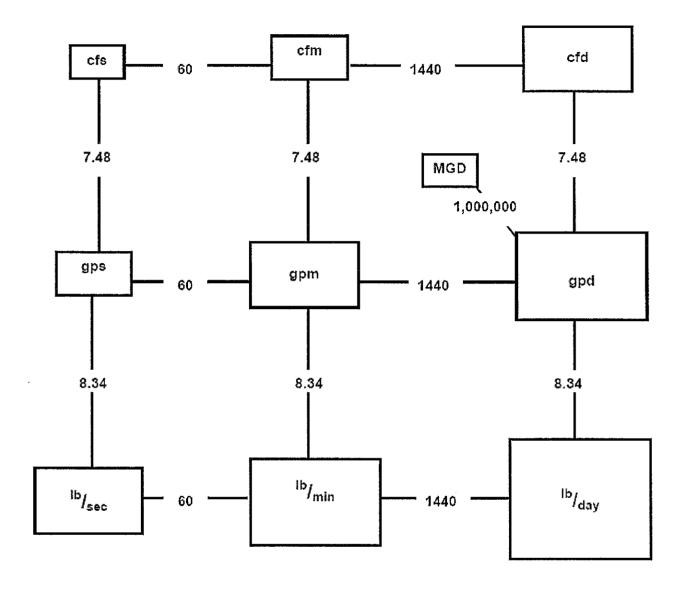

cfs=cubic feet per secondgps=gallons per secondcfm=cubic feet per minutegpm=gallons per minutecfd=cubic feet per daygpd=gallons per day

<u>To use this diagram</u>: First, find the box that coincides with the beginning units (i.e. gpm). Then, find the box that coincides with the desired ending units (i.e. cfs). The numbers between the starting point and ending point are the conversion factors. When moving from a smaller box to a larger box, multiply by the factor between them. When moving from a larger box to a smaller box, divide by the factor between them.

## **Dosage**

Dosage, mg/L = 
$$\frac{\text{Chemical Feed Rate, lb/day}}{(\text{Flow, MGD})(8.34 \, \text{lbs/gal})}$$

Dosage, 
$$mg/L = \frac{\text{(Chemical Feed Rate, lbs/day)(Chemical Purity, \%, expressed as a decimal)}}{\text{(Flow, MGD)(8.34 lbs/gal)}}$$

Dosage, mg/L = 
$$\frac{\text{(Feed Rate, grams/min) (1,000 mg/gram)}}{\text{(Flow, gal/min) (3.785 L/gal)}}$$

## **Pounds**

Chemical Fed, lbs = (Dose, mg/L) (Volume, MG) (8.34 lbs/gal)

Chemical Fed, lbs = 
$$\frac{\text{(Dose, mg/L) (Volume, MG)(8.34 lbs/gal)}}{\text{Chemical Purity, \%, expressed as a decimal}}$$

Feed Rate, lbs/day = (Dose, mg/L) (Flow, MGD) (8.34 lbs/gal)

Feed Rate, lbs/day = 
$$\frac{\text{(Dose, mg/L)(Flow, MGD)(8.34 lbs/gal)}}{\text{Chemical Purity, \%, expressed as a decimal}}$$

Feed Rate, lbs/day = 
$$\frac{\text{(Concentration, mg/mL)(Volume Pumped, mL) (1,440 min/day)}}{\text{(Time Pumped, min) (1,000 mg/g) (453.6 g/lb)}}$$

## Well Formulas

Well Yield, gal/min = 
$$\frac{\text{Volume, gal}}{\text{Time, min}}$$

Drawdown, ft = Pumping Water Level, ft - Static Water Level, ft

## Power

Power, watts = (Volts)(Amps)

Amps, single - phase = 
$$\frac{(746 \text{ watts/HP}) (\text{Horsepower})}{(\text{Volts}) (\text{Efficiency}, \%, \text{ as decimal}) (\text{Power Factor})}$$

Amps, three - phase = 
$$\frac{(746 \text{ watts/HP}) (\text{Horsepower})}{(1.732)(\text{Volts}) (\text{Efficiency}, \%, \text{ as decimal}) (\text{Power Factor})}$$


Horsepower = 
$$\frac{\text{(Volts )(Amps)}}{\text{(746 watts/HP)}}$$

Kilowatts, single - phase = 
$$\frac{\text{(Volts)(Amps)(Power Factor)}}{1,000 \text{ watts/kilowatt}}$$

Kilowatts, three - phase = 
$$\frac{\text{(Volts)}(\text{Amps)}(\text{Power Factor})(1.732)}{1,000 \text{ watts/kilowatt}}$$

Power Factor 
$$=\frac{\text{Watts}}{\text{(Volts)(Amps)}}$$

## **Pumps**

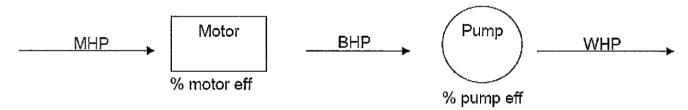

Pumping Rate, gal/min = 
$$\frac{\text{Volume, gal}}{\text{Time, min}}$$

Pumping Rate, gal/min = 
$$\frac{\text{(Length, ft)(Width, ft)(Depth, ft)(7.48 gal/ ft}^3)}{\text{Time, min}}$$

Pumping Rate, gal/min = 
$$\frac{(0.785)(\text{Diameter, ft})^2(\text{Depth, ft})(7.48 \text{ gal/ ft}^3)}{\text{Time, min}}$$

Water HP = 
$$\frac{\text{(Flow, gal/min) (Head, ft)}}{3960}$$

Motor Efficiency, 
$$\% = \frac{\text{Brake Horsepower}}{\text{Motor Horsepower}} \times 100\%$$

Pump Efficiency, 
$$\% = \frac{\text{Water Horsepower}}{\text{Brake Horsepower}} \times 100\%$$

Overall Efficiency, 
$$\% = \frac{\text{Water Horsepower}}{\text{Motor Horsepower}} \times 100\%$$

Static Head, ft = Suction Lift, ft + Discharge Head, ft

Static Head, ft = Discharge Head, ft - Suction Head, ft

Friction Loss, ft = (0.1) (Static Head, ft) \*\*use this formula in absence of other data

Total Dynamic Head, ft = Static Head, ft + Friction Losses, ft

Cost, \$/hr = (Motor Horsepower) (0.746 kW/HP)(Cost, \$/kW - hr)

## Solution Preparation

Concentration, 
$$\% = \frac{\text{Concentration, lbs/gal}}{\text{Density, lbs/gal}} \times 100\%$$

$$(Concentration_1)(Volume_1) = (Concentration_2)(Volume_2)$$

$$(Normality_1)(Volume_1) = (Normality_2)(Volume_2)$$

$$Chemical, lbs = \frac{\text{(Water Volume, gal X 8.34 lbs/gal)(Desired Concentration, \%)}}{\text{(100\% - Desired Concentration, \%)}}$$

Water Volume, gal = 
$$\frac{\text{(Chemical, lbs)}(100\% - \text{Desired Concentration, \%)}}{\text{(Desired Concentration, \%)}(8.34 \text{ lbs/gal})}$$

## **Preliminary Treatment**

Total Alkalinity<50 mg/L as CaCO<sub>3</sub>: Copper Sulfate, lbs = (0.9 lbs/acre - ft)(Volume, acre - ft)

Total Alkalinity>50 mg/L as CaCO<sub>3</sub>: Copper Sulfate, lbs = (Surface Area, acre)(5.4 lbs/acre)

Copper Sulfate, lbs (as Copper) = 
$$\frac{\text{(Dosage, mg/L) (Volume, MG) (8.34 lbs/gal)}}{\text{(Copper, \%, expressed as a decimal)}}$$

Citric Acid, lbs = 
$$\frac{\text{(Copper Sulfate, lbs)}}{2}$$

Area, acres = 
$$\frac{\text{(Length, ft)}(\text{Width, ft})}{43,560 \text{ ft}^2/\text{acre}}$$

Volume, acre - ft = (Area, acres) (Depth, ft)

Pond Volume, acre - ft = 
$$\frac{\text{(Length, ft)(Width, ft)(Depth, ft)}}{43,560 \text{ ft}^2/\text{acre}}$$

Pond Volume, gal =  $(Volume, acre - ft)(43,560ft^2/acre)(7.48gal/ft^3)$ 

Pond Volume, gal = (Area, acres)(Depth, ft)(43560 ft<sup>2</sup>/acre)(7.48 gal/ft<sup>3</sup>)

## Coagulation/Flocculation

## Design Criteria

Detention Time, 
$$sec = \frac{(Volume, gal)(1,440 \text{ min/day})(60 \text{ sec/min})}{Flow, gal/day}$$

$$Detention Time, min = \frac{(Volume, gal)(1,440 min/day)}{Flow, gal/day}$$

#### Lime Dosage

Lime Dosage, mg/L = (Alum Dosage, mg/L)(0.37)

$$\label{eq:Lime Feed Rate, grams/min} Lime Feed Rate, grams/min = \frac{(Lime Dosage, mg/L) (Flow, gal/day) (3.785 \, L/gal)}{(1,440 \, min/day) (1,000 \, mg/gram)}$$

Lime Dosage, lbs/day = 
$$\frac{\text{(Alum Feed Rate, lbs/day)}(0.37)}{\text{Commercial Purity, \%, expressed as a decimal}}$$

#### **Mixing Energy**

$$G = \sqrt{\frac{(550)(P)}{(\mu)(V)}}$$

Where: 
$$P = (hp)(0.90)$$

$$\mu$$
 = density of water, (lbs)(sec)/ft<sup>2</sup>

V = volume of flash mix, ft<sup>3</sup>

$$G = \sqrt{\frac{(62.4)(H)}{(\mu)(T)}}$$

$$\mu$$
 = density of water, (lb)(sec)/ft<sup>2</sup>

T = time, sec

$$G_2 = \frac{(G_1)}{\left[\frac{N_1}{N_2}\right]^{3/2}}$$

Where:  $G_2$  = velocity gradient at  $N_2$  rpm, sec<sup>-1</sup>

 $G_1$  = max velocity gradient unit can achieve, sec<sup>-1</sup>

 $N_1$  = maximum rpm

 $N_2$  = new rpm

$$T_1 = \frac{(G_2)(T_2)}{G_1}$$

Where:  $T_1$  = Time to equate velocity gradient correction, sec

G<sub>2</sub> = calculated velocity gradient, sec<sup>-1</sup>

 $T_2$ =detention time for unit process, sec

 $G_1$  = maximum G for jar test machine, sec<sup>-1</sup>

Settling Velocity, cm/min = 
$$\frac{(SOR, gpd/ft^2)(3785 cm^3/gal)}{(1440 min/day)(929 cm^2/ft^2)}$$

## **Jar Testing**

$$\label{eq:Liquid Solution, grams} \textbf{Liquid Solution, grams required} \\ \frac{\textbf{Liquid Solution, grams required}}{\textbf{Concentration, \%, expressed as a decimal}}$$

$$Concentration, mg/mL = \frac{(Concentration, lb/gal)(453,600 \, mg/lb)}{3,785 \, mL/gal}$$

$$Dose, \mu L = \frac{(Dose, mg/L)(Jar \ Test \ Beaker \ Volume, L)}{(Specific \ Gravity)(Concentration, \%, expressed \ as \ a \ decimal)}$$

Dosage, 
$$mg/L = \frac{Chemical Feed Rate, lb/day}{(Flow, MGD)(8.34 lbs/gal)}$$

## **Sedimentation**

Detention Time, 
$$hr = \frac{\text{(Volume, gal)}(24 \text{ hr/day)}}{\text{Flow, gal/day}}$$

Surface Overflow Rate (SOR), 
$$gal/day/ft^2 = \frac{Flow, gal/day}{Surface Area, ft^2}$$

Weir Overflow Rate (WOR), gal/day/lineal ft = 
$$\frac{\text{Flow, gal/day}}{\text{Weir Length, ft}}$$

Length of Circular Weir, ft = (3.14) (Weir Diameter, ft)

Length of Rectangular Weir, ft = (2)(Weir Length, ft) + (2)(Weir Width, ft)

## **Filtration**

#### **Hook Gauge**

Volume, gal = (Filter Bay Length, ft)(Filter Bay Width, ft)(Water Drop, ft)(7.48 gal/ ft<sup>3</sup>)

Average Time, 
$$\sec = \frac{\text{Test}_1, \sec + \text{Test}_2, \sec ... + \text{Test}_n, \sec}{\text{Number of Tests (n)}}$$

Average Time, min = 
$$\frac{\text{Average Time, sec}}{60 \text{ sec/min}}$$

Sand Area, ft<sup>2</sup> = (Sand Bed Length, ft)(Sand Bed Width, ft)

$$Filtration Rate, gal/min = \frac{Volume, gal}{Average Time, min}$$

Filtration Rate, gal/min/ 
$$ft^2 = \frac{\text{Filtration Rate, gal/min}}{\text{Sand Area, }ft^2}$$

#### **Filter Production Rate**

Filter Production Rate, gal/min = (Filtration Rate, gal/min/ ft²)(Filter Area, ft²)

Filter Production Rate, gal/day = (Filtration Production Rate, gal/min) (1,440 min/day)

#### Filter Backwash Rate

Backwash Water Volume, gal = (Backwash Rate, gal/min/ ft2)(Backwash Time, min)(Filter Area, ft2)

## **Dry Feeders**

#### **Feeder Calibration**

$$Average \ Sample \ Mass, \ grams = \frac{Sample_1, grams + Sample_2, grams + Sample_n, grams}{n \ (number \ of \ samples)}$$

$$Average \ Feed \ Rate, \ grams/min = \frac{Total \ Sample \ Mass, \ grams}{Sample \ Collection \ Time, \ min}$$

$$Average \ Feed \ Rate, \ lbs/day = \frac{(Average \ Feed \ Rate, \ grams/min) \ (1,440 \ min/day)}{453.6 \ grams/lb}$$

$$Feeder \ Setting, \ grams/min = \frac{(Dose, mg/L) \ (Flow, \ gal/day) \ (3.785 \ Liters/gal)}{(1,440 \ min/day) \ (1,000 \ mg/gram)}$$

# <u>Liquid Feeders</u>

#### **Feeder Calibration**

$$Average \ Sample \ Volume, \ mL = \frac{Sample_1 \, , mL + \ Sample_2 \, , mL + \ Sample_n \, , mL}{n \, (number \ of \ samples)}$$

$$Average \ Feed \ Rate, \ mL/min = \frac{Total \ Sample \ Volume, \ mL}{Sample \ Collection \ Time, \ min}$$

$$Feed \ Rate, \ gal/day = \frac{(Average \ Feed \ Rate, \ mL/min) \, (1,440 \ min/day)}{3,785 \ mL/gal}$$

$$Feeder \ Setting, \ mL/min = \frac{(Dose, \ mg/L) \, (Flow, \ gal/day) \, (3.785 \ Liters/gal)}{(Concentration, \ mg/mL) \, (1,440 \ min/day)}$$

$$Feeder \ Setting, \ gal/day = \frac{(Dose, \ mg/L) \, (Flow, \ MGD) \, (8.34 \ lbs/gal)}{Concentration, \ lbs/gal}$$

$$Feeder \ Setting, \ gal/day = \frac{(Dose, \ mg/L) \, (Flow, \ MGD)}{(Concentration, \ mg/L) \, (Flow, \ MGD)}$$

$$Gose, \ mg/L) \, (Flow, \ MGD)$$

$$Goncentration, \ mg/L) \, (Flow, \ MGD)$$

$$Goncentration, \ mg/L) \, (Flow, \ MGD)$$

#### **Liquid Chemical Characteristics**

Density, lbs/gal = (Specific Gravity)(8.34 lbs/gal)

$$Specific Gravity = \frac{Density of Solution, lbs/gal}{8.34 \, lbs/gal}$$

Concentration, lbs/gal = (Density, lbs/gal)(Concentration, %, expressed as a decimal)

$$Concentration, mg/mL = \frac{(Concentration, lbs/gal)(453,600 mg/lb)}{3,785 \, mL/gal}$$

Concentration, 
$$\% = \frac{\text{Concentration, lbs/gal}}{\text{Density, lbs/gal}} \times 100\%$$

## **Detention Time**

Detention Time, 
$$sec = \frac{(Volume, gal)(24 \,hrs/day)(60 \,min/hr)(60 \,sec/min)}{Flow, gal/day}$$

$$Detention \ Time, \ min = \frac{(Volume, \ gal)(24 \ hrs/day)(60 \ min/hr)}{Flow, \ gal/day}$$

Detention Time, hr = 
$$\frac{\text{(Volume, gal)}(24 \text{ hr/day)}}{\text{Flow, gal/day}}$$

Detention Time, days = 
$$\frac{\text{Volume, gal}}{\text{Flow, gal/day}}$$

## **Chlorination**

Chlorine Demand, mg/L = Chlorine Dose, mg/L - Chlorine Residual, mg/L

Total Chlorine Residual, mg/L = Combined Residual, mg/L + Free Residual, mg/L

Free Chlorine Residual, mg/L - Total Residual, mg/L - Combined Residual, mg/L

Combined Chlorine Residual, mg/L = Total Residual, mg/L - Free Residual, mg/L

Chlorine Feed Rate, lbs/day = 
$$\frac{(Dosage, mg/L)(Flow, MGD)(8.34 lbs/gal)}{Chemical Purity, %, expressed as a decimal}$$

$$Dosage, mg/L = \frac{(Chlorine \, Feed \, Rate, \, lbs/day)(Chemical \, Purity, \, \%, \, expressed \, as \, a \, decimal)}{(Flow, MGD)(8.34 \, lbs/gal)}$$

#### General Bleach Formulas

 $Chlorine\ Dose,\ mg/L = \frac{(Bleach\ Fed,\ gal/day)\ (Available\ Chlorine,\ \%,\ expressed\ as\ a\ decimal)}{Flow,\ MGD}$   $Hypochlorite\ Feed\ Rate,\ gal/day = \frac{(Chlorine\ Dose,\ mg/L)\ (Flow,\ MGD)}{Available\ Chlorine,\ \%,\ expressed\ as\ a\ decimal}$ 

#### **Bleach Dilutions**

Available Chlorine, % = (Bleach, gal) (Available Chlorine, %, expressed as a decimal)

Desired Volume, gal

#### HTH

$$Chlorine \, Dosage, mg/L = \frac{(\text{HTH Feed Rate, lb/day}) \left( \begin{array}{c} \text{HTH Available Chlorine, \%} \\ \text{expressed as a decimal} \end{array} \right)}{(\text{Flow, MGD})(8.34 \, \text{lbs/gal})}$$

Available Chlorine,  $\% = \frac{\text{(HTH, lb) (Available Chlorine, \%, expressed as decimal)}}{\text{(Hypochlorite Solution, gal)(8.34 lb/gal)}} \times 100\%$ 

#### Substitution of HTH or Chlorine for Bleach, etc

Chlorine, lb = (Available Chlorine, %, expressed as decimal) (Bleach Volume, gal) (8.34 lbs/gal)

Chlorine, lb = (HTH, lb) (Available Chlorine, %, expressed as decimal)

$$HTH, lb = \frac{\text{(Available Chlorine, \%, expressed as decimal) (Bleach, gal) (8.34 lb/gal)}}{\text{HTH, Available Chlorine, \%, expressed as a decimal}}$$

## Hardness, Carbonate and Noncarbonate

Laboratory Results TH = Total Hardness TA = Total Alkalinity	Noncarbonate Hardness (Lime & Soda Ash used)	Carbonate Hardness (Lime only used)	Lime Dosage Formula To be Used
(1) TH less than TA	0	TH	I
(2) TH = TA	0	TH	I
(3) TH greater than TA	TH – TA	TA	II

( ) means "concentration of"

```
Lime Dosage, mg/L = (C0_2) + (Total Hardness) + (Mg) + (Excess)
```

II Lime Dosage, 
$$mg/L = (C0_2) + (HCO_3) + (Mg) + (Excess)$$

Soda Ash Dosage, mg/L = (Total Hardness) - (HCO<sub>3</sub>) + (Excess)

 $Total\, Hardness = (Calcium\, Hardness) + (Magnesium\, Hardness)$ 

Chemical Required, lbs/day =  $\frac{\text{(Dose, mg/L) (Flow, MGD)(8.34 lbs/gal)}}{\text{(% Commercial Purity, expressed as a decimal)}}$ 

## Softening

Alkalinity Constituents Alkalinity, mg/L as CaCO<sub>3</sub>

Titration Results	Bicarbonate	Carbonate	Hydroxide	
P = 0	P = 0 T 0		0	
P is less than ½ T	T – (2)(P)	(2)(P)	0	
P = ½ T	0	(2)(P)	0	
P is greater than ½ T	eater than ½ T 0 (2)(T) – (2)(P)		(2)(P) – T	
P = T	0	0	Т	

Where

P = phenolphthalein alkalinity, mg/L as CaCO<sub>3</sub>

T = total alkalinity, mg/L as CaCO<sub>3</sub>

## **Alkalinity**

Phenolphthalein Alkalinity, mg/L as  $CaCO_3 = \frac{(A)(N)(50,000)}{Sample Volume, mL}$ 

Total Alkalinity, mg/L as  $CaCO_3 = \frac{(B)(N)(50,000)}{Sample Volume, mL}$ 

Where:

A = mL of titrant used to reach pH 8.3

B = total mL of titrant used

N = acid normality

## **Fluoridation**

		Purity		Available Fluoride Ion (AFI)		
Chemical	Formula	Percent Decimal		Percent	Decimal	
Sodium Fluoride	NaF	98%	0.980	45.2%	0.452	
Sodium Fluorosilicate	Na <sub>2</sub> SiF <sub>6</sub>	98.5%	0.985	60.7%	0.607	
Fluorosilicic Acid	H₂SiF <sub>6</sub>	23%	0.230	79.2%	0.792	

$$\label{eq:final_control_formula} Feed \, \text{Rate, Ibs/min} = \frac{\text{(Dose, mg/L) (Flow, gal/min) (8.34 \, lbs/gal)}}{(1,000,000) \, \text{(AFI, expressed as decimal) (Purity, expressed as a decimal)}}$$

Feed Rate, grams/min = 
$$\frac{\text{(Feed Rate, lbs/day)(453.6 grams/lb)}}{\text{(1440 min/day)}}$$

Saturator Feed Rate, gal/min = 
$$\frac{\text{(Dose, mg/L) (Flow, gal/min)}}{\text{(18,000 mg/L)}}$$

$$Calculated \ Dosage, mg/L = \frac{(Fluoride, lbs)(AFI, expressed as \ decimal)(Purity, expressed as \ decimal)}{(Flow, MGD)(8.34 \ lbs/gal)}$$

$$\frac{\text{Calculated Dosage, mg/L}}{\text{(Saturator)}} = \frac{\text{(Solution Fed, gal/day) (18,000 mg/L)}}{\text{(Flow, gal/dayl)}}$$

## **Corrosion Control**

Langelier Index (LI) = pH - pH<sub>S</sub>

pH of Saturation (pH $_{\rm S}$ ) = A + B - log Calcium Hardness - log Total Alkalinity

 $Aggressive\ Index\ (AI) = pH + log\ Calcium\ Hardness + log\ Total\ Alkalinity$ 


Values of "A" for various Temperatures, °C				
Temperature, °C	Α			
0	2.34			
5	2.27			
10	2.2			
15	2.12			
20	2.04			
25	1.98			
30	1.91			
40	1.76			
50	1.62			
60	1.47			

Values for "B" for various levels of				
TDS, mg/L	В			
0	9.63			
50	9.72			
100	9.75			
200	9.8			
400	9.86			
800	9.94			
1,600	10.04			

Values of log of Ca or Alkalinity as CaCO₃ in mg/L				
mg/L	log <sub>10</sub>			
10	1.00			
20	1.30			
30	1.48			
40	1.60			
50	1.70			
60	1.78			
70	1.84			
80	1.90			
90	1.95			
100	2.00			
200	2.30			
300	2.48			
400	2.60			
500	2.70			
600	2.78			
700	2.84			
800	2.90			
900	2.95			
1,000	3.00			

Corrosivity Characteristics as Addressed by Indices						
Corrosive Characteristics   Langelier Index (LI)   Aggressive Index (AI)						
Highly Aggressive	< - 2.0	< 10.0				
Moderately Aggressive	- 2.0 to < 0.0	10.0 to < 12.0				
Non-aggressive	> 0.0	> 12.0				

# Flow Through a Partially Full Pipe

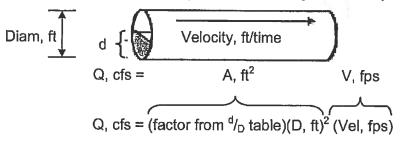

d, in / D, in	Factor						
0.01	0.0013	0.26	0.1623	0.51	0.4027	0.76	0.6404
0.02	0.0037	0.27	0.1711	0.52	0.4127	0.77	0.6489
0.03	0.0069	0.28	0.1800	0.53	0.4227	0.78	0.6573
0.04	0.0105	0.29	0.1890	0.54	0.4327	0.79	0.6655
0.05	0.0147	0.30	0.1982	0.55	0.4426	0.80	0.6736
0.06	0.0192	0.31	0.2074	0.56	0.4526	0.81	0.6813
0.07	0.0242	0.32	0.2167	0.57	0.4625	0.82	0.6893
0.08	0.0294	0.33	0.2260	0.58	0.4724	0.83	0.6969
0.09	0.0350	0.34	0.2355	0.59	0.4822	0.84	0.7043
0.10	0.0409	0.35	0.2450	0.60	0.4920	0.85	0.7115
0.11	0.0470	0.36	0.2546	0.61	0.5018	0.86	0.7186
0.12	0.0534	0.37	0.2642	0.62	0.5118	0.87	0.7254
0.13	0.0600	0.38	0.2739	0.63	0.5212	0.88	0.7320
0.14	0.0668	0.39	0.2836	0.64	0.5308	0.89	0.7384
0.15	0.0739	0.40	0.2934	0.65	0.5404	0.90	0.7445
0.16	0.0811	0.41	0.3032	0.66	0.5499	0.91	0.7504
0.17	0.0885	0.42	0.3130	0.67	0.5594	0.92	0.7560
0.18	0.0961	0.43	0.3229	0.68	0.5687	0.93	0.7612
0.19	0.1039	0.44	0.3328	0.69	0.5780	0.94	0.7662
0.20	0.1118	0.45	0.3428	0.70	0.5872	0.95	0.7707
0.21	0.1199	0.46	0.3527	0.71	0.5964	0.96	0.7749
0.22	0.1281	0.47	0.3627	0.72	0.6054	0.97	0.7785
0.23	0.1365	0.48	0.3727	0.73	0.6143	0.98	0.7816
0.24	0.1449	0.49	0.3827	0.74	0.6231	0.99	0.7841
0.25	0.1535	0.50	0.3927	0.75	0.6318	1.00	0.7854

Wastewater Treatment Formulas