



Typical Perc Dry-to-Dry Cleaning Machine

Rear Illustration of Machine

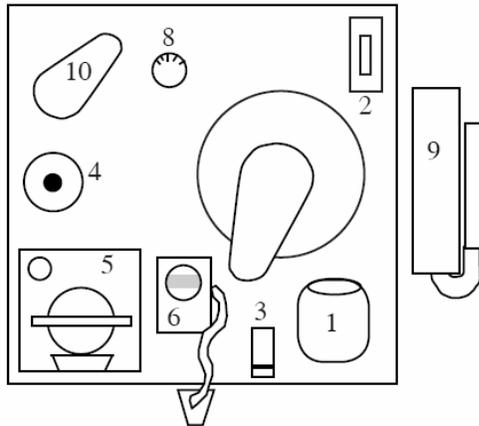

Front Illustration of Machine

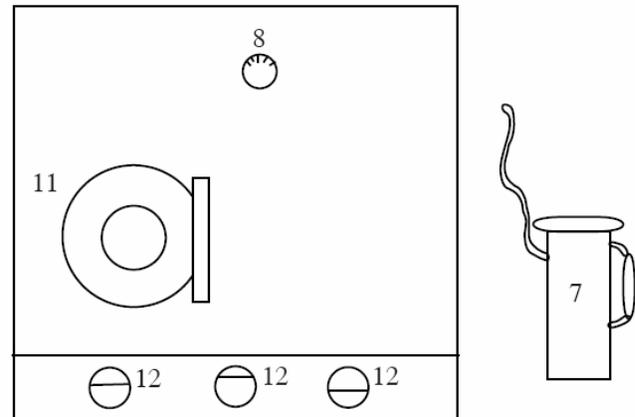

Typical areas to inspect for leaks on a Perc Machine:

1. Button Trap (during wash cycle)	7. Wastewater Evaporator
2. Lint Trap (during dry cycle)	8. Refrigerated Condenser Outlet Temperature Gauge, and Pressure Gauge, may be on front or back of machine (during cool down)
3. Pump (during wash cycle)	9. Vapor Adsorber (during dry cycle)
4. Cartridge Filter (housing during wash cycle)	10. Spin Disk filter (housing during wash cycle)
5. Still (during distillation cycle)	11. Loading Door Gasket and Seating (during wash and dry cycle)
6. Water Separator (during dry and distillation cycle)	12. Storage Tanks

Other areas to inspect not shown in illustration: hose connections, unions, couplings, valves, air and exhaust duct work, solvent container, and hazardous waste container.